

# CHANGING THE MBX WHEELS

This guide will show you how to remove the braces to get the bucket out of the shipping crate.

## STEP 01.



Unscrew the 4 bolts holding the caster to the underside of the bucket using a 7/16" socket or box end wrench



## STEP 05.



Place the washer and the nut on the end of the axle.

## STEP 02.



Place one of the u-shaped brackets over the foot of the bucket, aligning it approximately with where the old wheel was.



## STEP 06.



Use channel locks or vise grip locking pliers to hold the axle in place.



## STEP 03.



Remove the nut and one of the large washers from the end of the axle on one of the outdoor wheel assemblies, keeping the rest of the assembly intact.

## STEP 07.



Using a 15/16" box end wrench or socket, tighten the nut. Repeat these steps for the 3 other wheels.



## STEP 04.



Align and push the axle of the wheel assembly through the hole in the bracket

