



LEGEND

- +— CONDUCTORS CONNECTED
- |- CONDUCTORS NOT CONNECTED
- ← CONDUCTOR INDICATING LOAD DIRECTION
- CURRENT TRANSFORMER

Only qualified electrical personnel should install this equipment.

- Before performing installation or maintenance, disconnect all sources of electric power.
- Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.

- Installation Notes:**
- 1) Auditor is DIN-rail mounted and requires 35mm wide space.
 - 2) Current transformer installation – For load monitoring, K is towards the grid, arrow is towards the load.
 - 3) Current transformers must be suitably secured in position.
 - 4) All wiring shall be tidy and secured in accordance with the wiring rules in your jurisdiction.
 - 5) An existing or new protective device can be used depending on the regulations in your jurisdiction.
 - 6) Follow the rules in your jurisdiction for the use of RCD protection.
 - 7) For more information, refer to the quick start guide and wattwatchers.com.au/support

Find diagrams for more configurations at wattwatchers.com.au/support

Issue	Description	Drawn	Approved	Date
1	Final	KS	JC	03/19



T2 9 WATTWAT	
A M T V	A T T T T A W
I T A T	T A W T A W A T
A T	A W T W T W
A T	A W M V W T T W T

Client Details	
Drawn By	KS
Date	03/19
Approved By	JC
Date	03/19

Project Title	
CONNECTION DIAGRAMS	

Drawing Title	
A6M MONITORING SIX 1-PHASE LOADS CONNECTION DIAGRAM	

Project Code	
20180153	
Drawing No	
WW018029	

Status	Revision
FINAL	A
Scale	NTS