




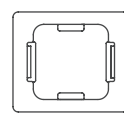
 
 
 
 
 
Floating Poster

Assembly Instructions

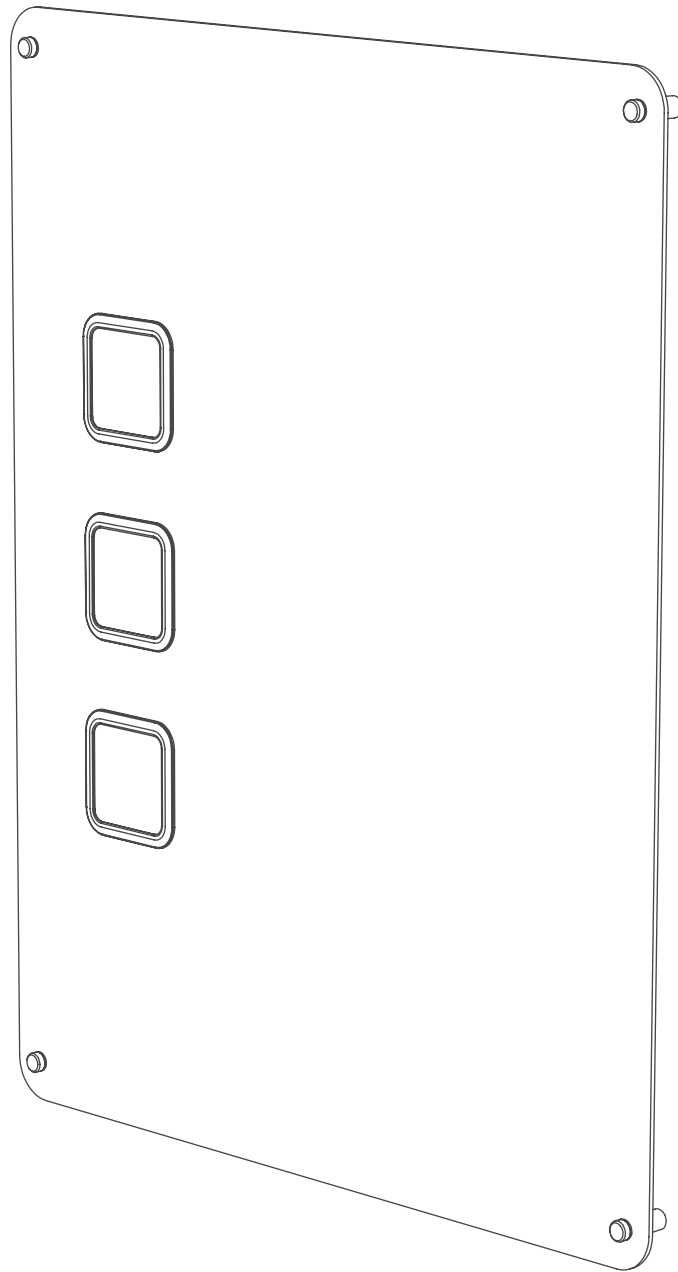





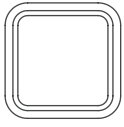Keep the packaging box
for the return shipment.



Parts List

| | | | | | | | |
|---|---|--|--|--|--|---|---|
|  <p>Front Gasket</p> <p>x1-3</p> |  <p>Device</p> <p>x1-3</p> |  <p>Back Gasket</p> <p>x1-3</p> |  <p>Signage</p> <p>x1</p> |  <p>Standoff Screws</p> <p>x4</p> |  <p>Wall Plug</p> <p>x1</p> |  <p>Charging Cable</p> <p>x1</p> |  <p>High Capacity Battery</p> <p>Optional x1</p> |
|---|---|--|--|--|--|---|---|

Installation Steps

-  Attach front gasket to the device (a) and insert it into the signage (b). Secure the device and signage by attaching the back gasket (c).
-  Mount the standoff screw base with a screw of preferred choice.
-  Have the signage in between two rubber inserts and fasten the external screw to hold the signage on to the wall. Repeat steps 2 and 3 with rest of standoff screws.
-  Attach the charging cable to the device (USB-C) and to the wall plug (USB-A).

Optional Battery: Attach device (USB-C) to charged battery pack (USB-A).

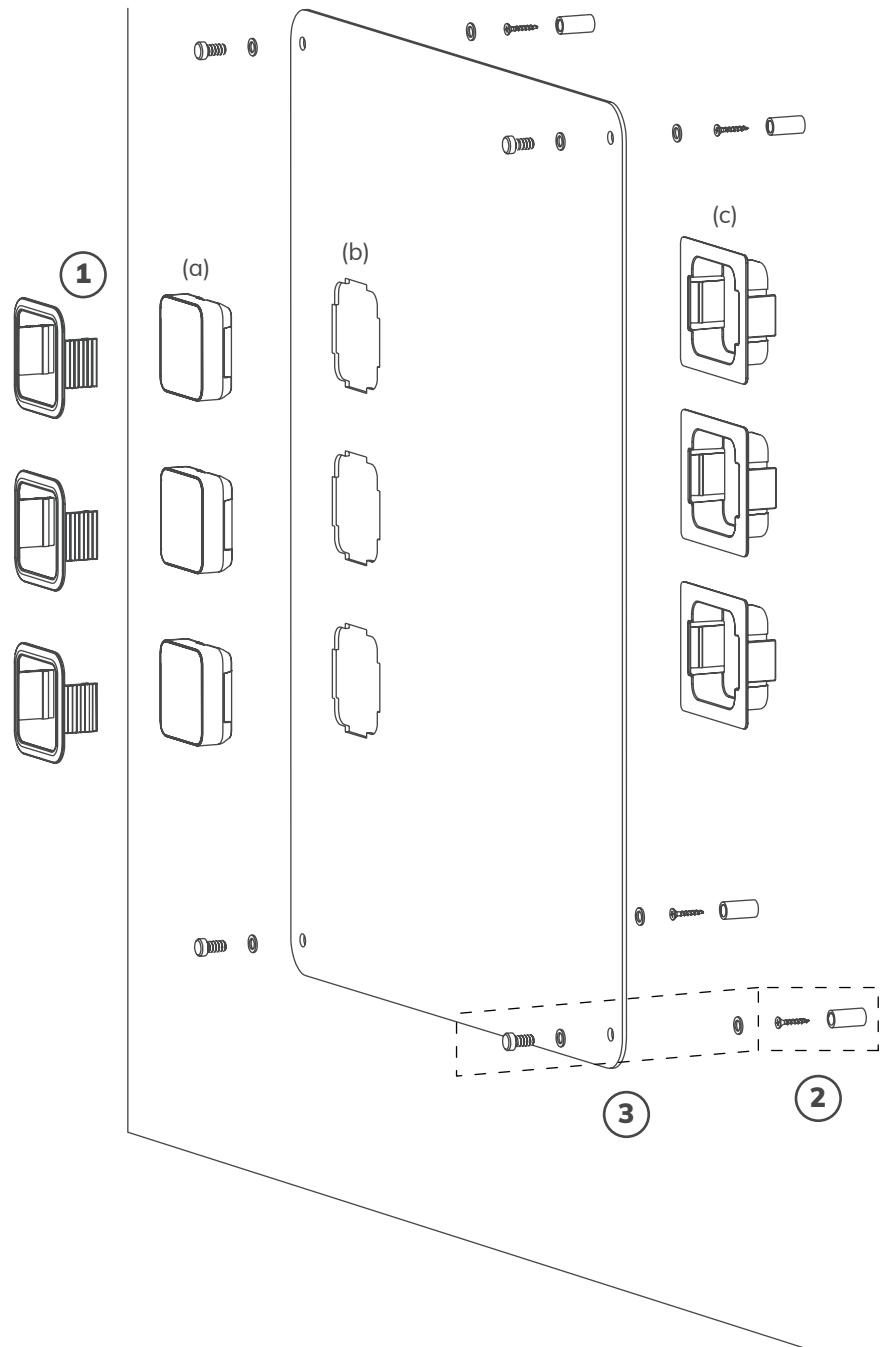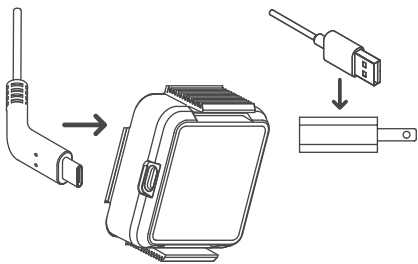

Return Shipping

Once the program has ended, pack the original contents in the box it arrived in and affix the return shipping label provided to the outside of the box. If you have misplaced the shipping label please email support@tiptappay.com and we will happily email you a replacement.



Complete a full charge cycle before use.

Battery life is approximately 49 hours.