

**Guide to:** Retrofit Buzzer on MI-MX Unit

**Compiled by:** Aki Ainetdin

**Date:** 24.09.2020

**Repreparation:** Disconnect electrical power from the unit. Remove main legs back, front and side panel.

**Tools and accessories:** Normal hand tools and one mas-con connection tool, Pancon MMIT-156F.



Kit Includes:

- Buzzer + support + fastening screw and nut
- Cable set with connectors
- 2 x cable ties



1. Find installation location for the buzzer behind the speed controller.

Example of location shown on the image.


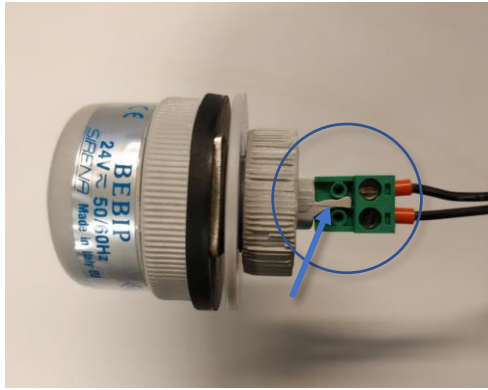

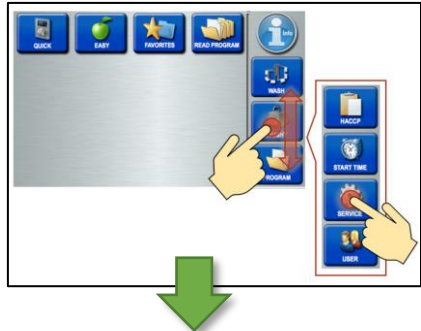


2. Open the I/O board cover



3. Connect wire nr.1 to Connection X4:1.  
Use Pancon tool for connection wire to the connector



<p>4. Connect wire nr.2 (with the Abico) to earth point shown on the image.</p> <p>Tie the cable with cable ties.</p>	 A close-up photograph showing a hand holding a red wire with a metal terminal. The wire is being inserted into a terminal on a green printed circuit board (PCB). A black arrow points to the terminal where the wire is being connected.
<p>5. Connect the other end of the cable (with the push-in connector) to the buzzer connection pins.</p> <p>Note, that the polarization is guided correctly with a guide pin</p>	 A photograph of a cylindrical buzzer with a silver top and a black bottom. The top has a green push-in connector. A blue arrow points to the connector, which is being inserted into a green terminal block. The terminal block has two pins, and the connector is being pushed into the right one.
<p>6. Re-assembly all covers and connect electricity back to the kettle.</p>	 A photograph of the control panel of a Dietatec kettle. The panel is black with a silver keypad. The brand name "Dietatec" and the logo "DOD" are visible at the top. The keypad has several buttons with icons for different functions.
<p>7. Enable first the buzzer from Service settings</p> <p>Service -&gt; Enter "Stage 1" service Code 123444 -&gt; Choose settings -&gt; Enter "Stage 2" Service code 314159 -&gt; Choose "Buzzer" and activate it.</p>	 A screenshot of the service settings menu on the kettle's control panel. The menu is displayed on a screen with a blue background. At the top, there are icons for "QUICK", "EASY", "FAVORITES", "READ PROGRAM", and "HELP". Below these, there are buttons for "MAINT", "PROGRAM", "SERVICE", and "USER". A yellow hand icon points to the "SERVICE" button. A red box highlights the "SERVICE" button and the "Buzzer" option below it. A green arrow points downwards from the bottom of the screen.

Stage 1 Service code

123444  
Access code

040 555 444  
09 755 191 00

PREMIER MI 150 ELECTRIC  
Kettle Serial number 20120356  
Program version 1.01

1 2 3 4 5 6 7 8 9 0

BYPASS FAULTS

Info

Last service  
Hours used  
11 total  
11 service  
kWh total used  
21.2

EXIT

NEW SERVICE SERVICE LIST TESTING SETTINGS

FOOD TEMP. °C KETTLE TEMP. °C WATER METER LOG

INTERNET GSM TELEPHONE 1 TELEPHONE 2

SERIAL NUMBER

EXIT

Stage 2 service code.

314159  
Access code

040 555 444  
09 755 191 00

PREMIER MI 150 ELECTRIC  
Kettle Serial number 20120356  
Program version 1.01

1 2 3 4 5 6 7 8 9 0

BYPASS FAULTS

Info

Last service  
Hours used  
11 total  
11 service  
kWh total used  
21.2

EXIT

MX SCALES CHS ELECTRIC

HOT WATER BUZZER KW LOGO

VOLUME

NOTE!  
Exit service menus before entering data

Scales board Calibrate scales

EXIT

8. Activate the buzzer from user settings.  
Start display -> User -> Page 2 -> Buzzer -> and choose from:
1. PROGRAM END sounds alarm when program ends.
  2. PROGRAM END + NOTE sounds alarm when a note appears as part of program and when program ends.
  3. NO ALARM. Alarm will not sound
- For instruction please see User manual