

NOVIKBLOCK™ - ELECTRICAL BOX A-50 INSTALLATION GUIDE

FRANÇAIS
AU VERSO

INSTALLATION STEPS


1-Locate an installation position with respect to electric wires coming through the wall.

2-After having applied sealant between the wall and the rear part of an Novik's Universal Block A-800 (sold separately), attach it with nails or screws. Cut off the appropriate precut forms on the lids of the Universal Block A-800 and the Electrical Box cover according to the product to be installed. Install the siding all around the part.

3-Pass wires through pull-through clips (additional knock out available). Remove the four spacers located on one side of the box. In case of a 3/4"(1,91cm) or more siding thickness, install the 4 spacers in their holes in the back of the Electrical Box. (Figure A)

4-Insert the Electrical Box into the rear part of the Universal Block A-800, screw it at the four corners. Assemble the Electrical Box cover and install the Universal Block lid. (Figure B)

5-At this point, the Electrical Box A-50 installation is done. Finish the installation by installing an electrical device or light fixture (not include). Follow the manufacturer's installation instructions and be sure that all elements have the proper sealant.

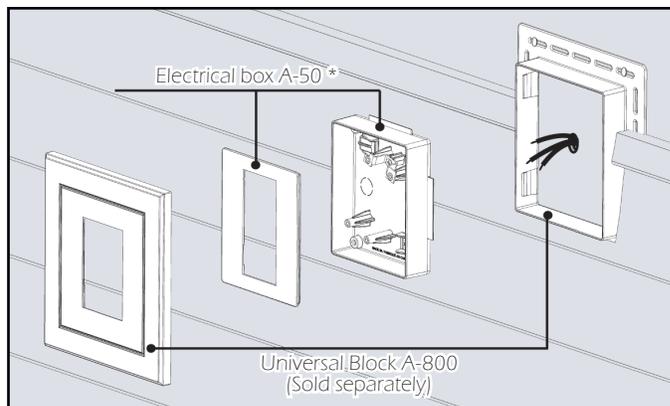

*Caution:

- Use with Novik Universal Block A-800. (sold separately)
- Use with weather protective cover
- Use non-metallic sheathed cable sizes.



CAN/CSA C22.2 No.18

Figure A



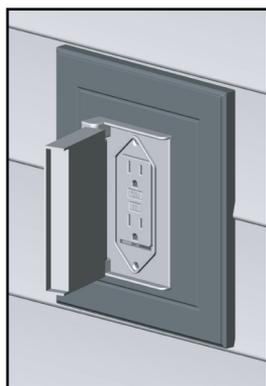


Figure B

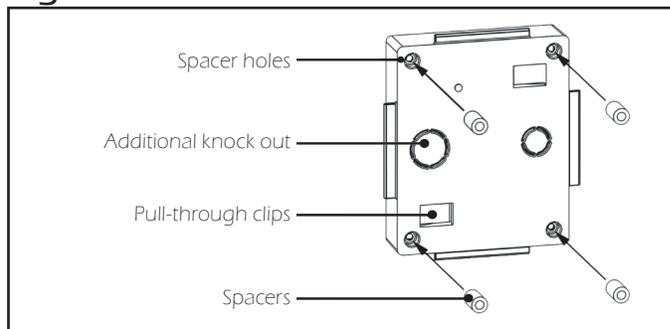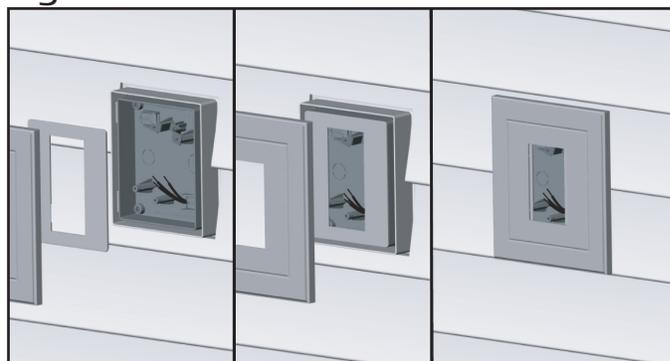

NOVIKBLOCK^{MC} - BOÎTE ÉLECTRIQUE A-50

GUIDE INSTALLATION

ENGLISH ON
REVERSE

ÉTAPES D'INSTALLATION


1-Situer un emplacement d'installation vis-à-vis des fils électriques passant à travers le mur.

2-Après avoir appliqué du scellant entre le mur et la base d'une Plaque de montage universelle A-800 de Novik (vendue séparément), fixer avec des clous ou des vis. Couper les pré-découpes appropriées sur la façade de la Plaque de montage universelle A-800 et le couvercle de la Boîte électrique A-50 selon le produit à y être installé. Poser le revêtement tout autour de la base.

3-Passer les fils électriques dans la boîte par les clips passe-fils (pré-découpes additionnelles disponibles). Détacher les 4 espaceurs présents sur le côté de la boîte. Dans le cas d'un revêtement de 3/4"(1,91cm) ou plus d'épaisseur, installer les 4 espaceurs dans leurs trous au dos de la Boîte électrique A-50. (Figure A)

4-Insérer la Boîte électrique A-50 dans la base de la Plaque de montage universelle A-800, visser aux quatre coins, assembler le couvercle de la Boîte électrique et installer la façade de la Plaque de montage universelle A-800. (Figure B)

5-À ce point, vous avez terminé l'installation de la Boîte électrique A-50. Terminer l'installation en assemblant une prise électrique ou un luminaire (non inclus). Bien suivre les instructions du fabricant et s'assurer de l'étanchéité de chacune des composantes.

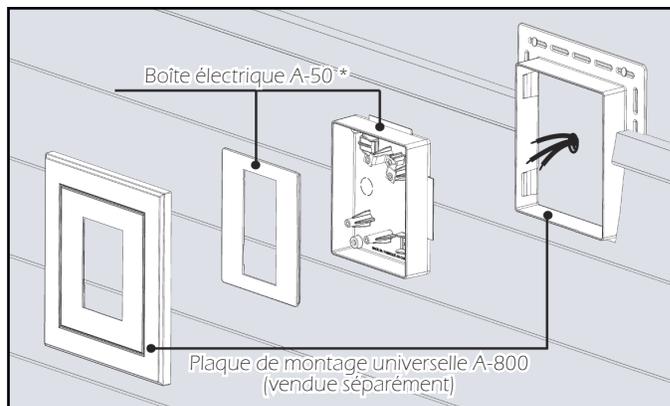

*Attention:

-À utiliser avec la Plaque de montage universelle A-800 de Novik. (Vendue séparément)

-À utiliser avec une prise à couvercle étanche.

-À utiliser avec des câbles à gaine non-métallique.



CAN/CSA C22.2 No.18

Figure A


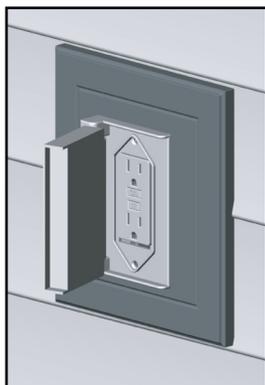


Figure B

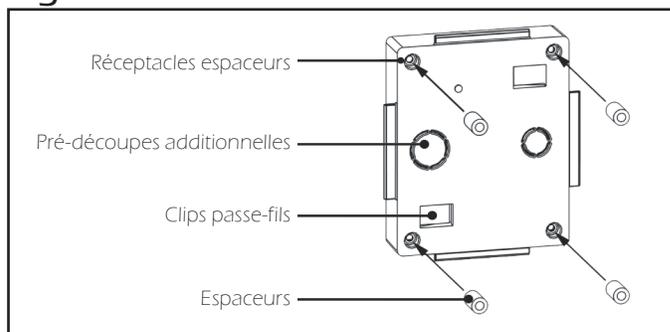