



SWEDISH DOOR

Floating Shelf Assembly Guide:

Everything you need to know



About Us



At Swedish Door, we firmly believe that everyone deserves to enjoy a stunning and cost-effective space. Since our launch in 2016, we've been dedicated to making high-quality, bespoke-looking kitchens achievable for more people. With thousands of successful projects under our belt, we take immense pride in helping people transform their homes.



Upgrade your home with premium quality doors that won't break the bank.



Collaborate with our design partners to create a space that reflects your style.



Tailor every detail to your exact specifications with our fully customizable options.



Discover a wide selection of styles, materials, and finishes to match your vision.




Step 1: Cleat Installation



- Locate and mark the studs and level the cleat on the wall.
- Predrill the screw holes on the cleat every 12-16" with a 7/64" drill bit.
- Add wood glue or construction adhesive to the back side of the cleat. Clean up any over run of the adhesive once the cleat is installed.
- Install 2" screws into the stud where possible.


Note: When installing a screw where there is no stud, use an Alligator® anchor (see end of document). Pre-drill a 7/64" hole in the cleat and a 1/4" in the drywall then insert the Alligator® anchor into the hole.

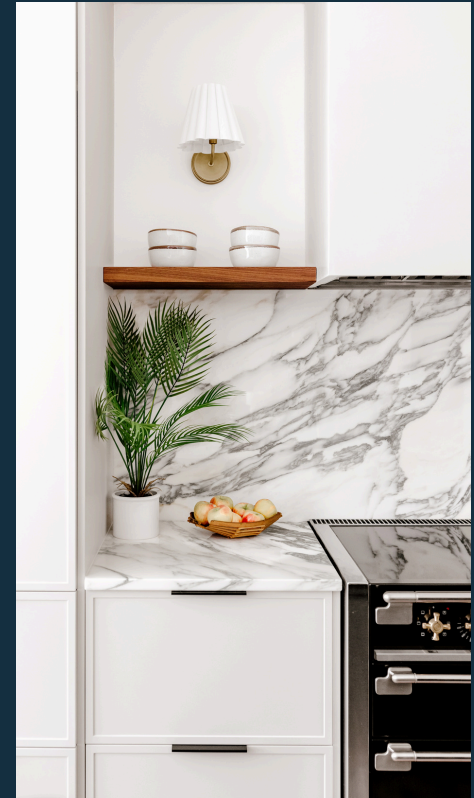

Step 2: Install the Bracket




- Install brackets on the cleat flush at the top of the cleat.
- Use 2 x 1 1/2" round head screws.

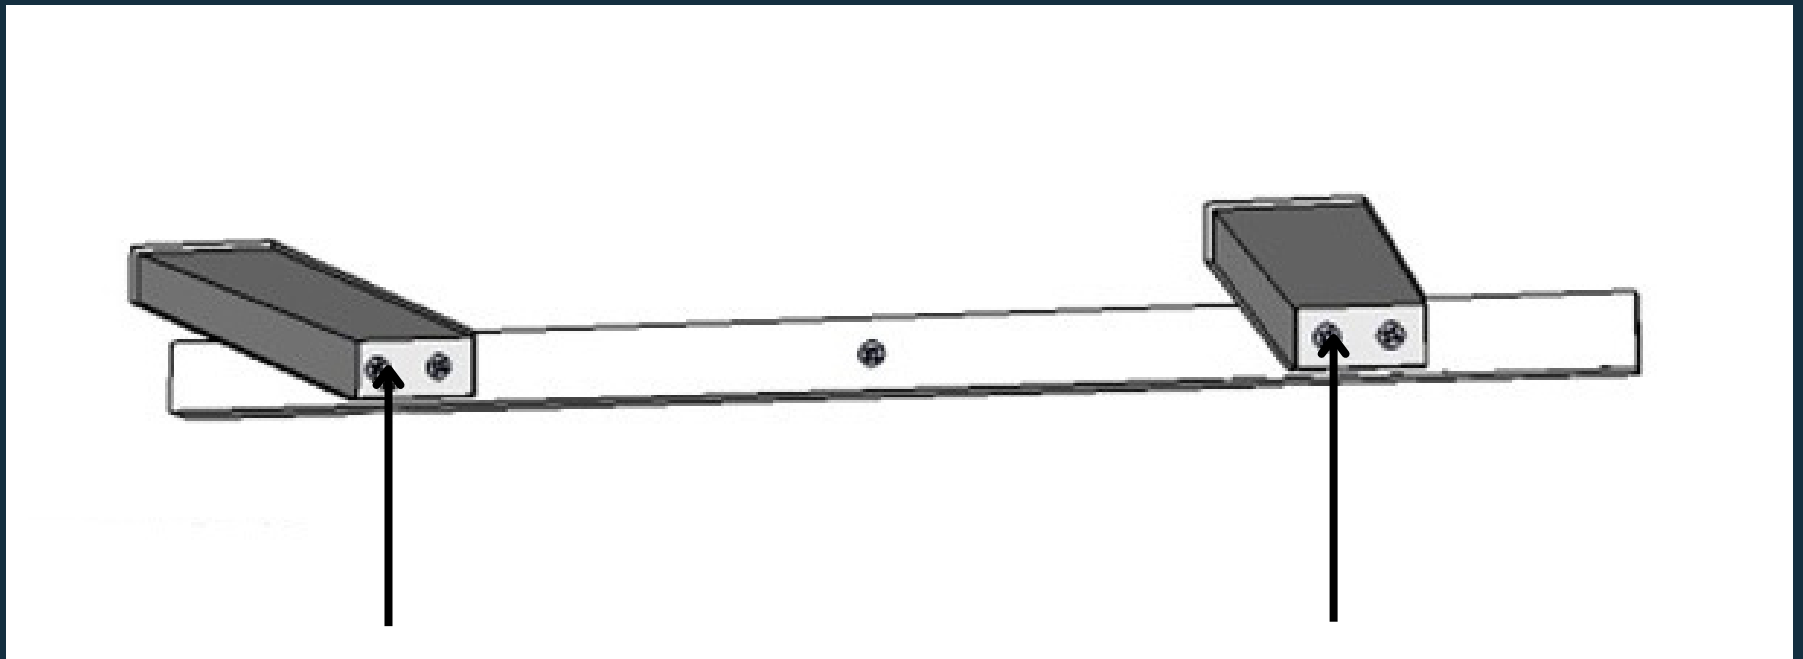

Step 3: Level the Shelf & Glue the Cleat

1) Before fixing shelf onto the bracket, make sure the shelf is level on the brackets. If needed, you can add a cork shim on the front tip of the brackets to raise the front of the shelf

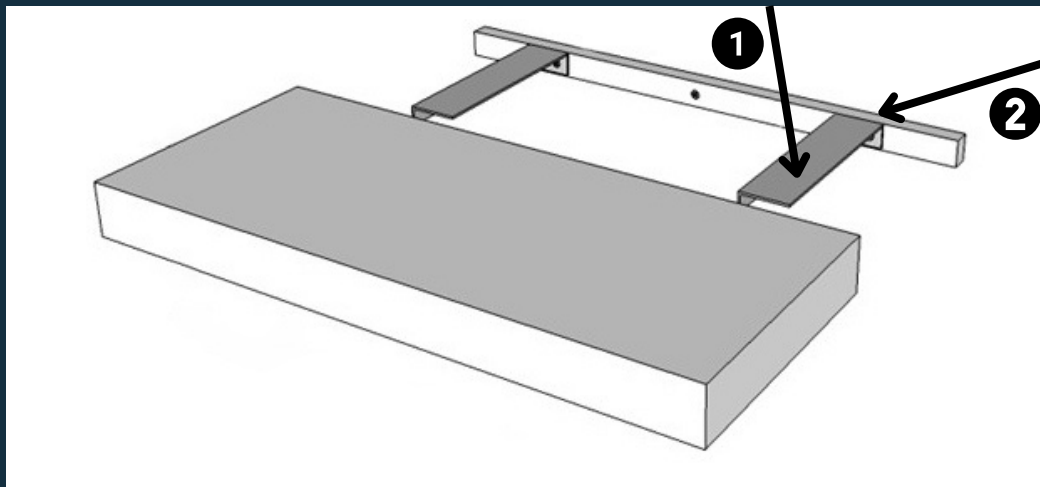


2) Add glue or caulking at this joint to glue the shelf to the wall and to the wood cleat before inserting the shelf. Insert the shelf and wait 24 hours for the adhesive to dry before loading the shelf.

Step 4: Bracket Spacing





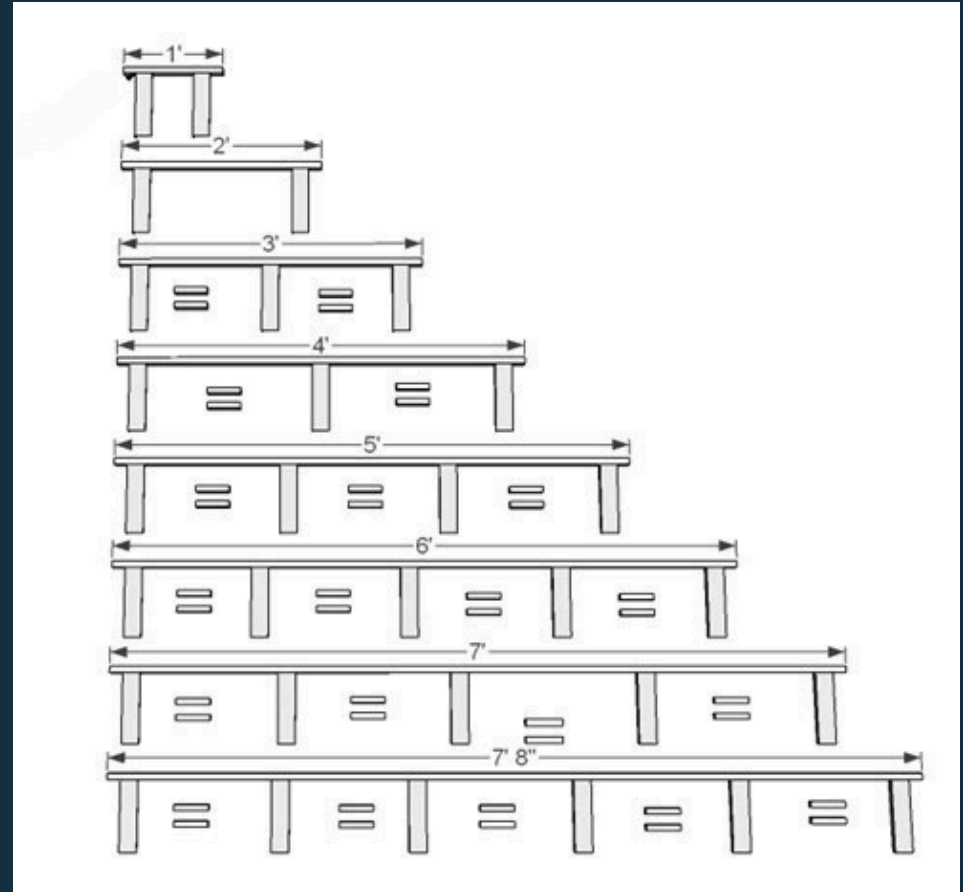




- Install the outer brackets 2"-4" from the ends of the cleat. Space out the interior brackets evenly across the interior space.



List of Parts

S
D

Photo	Item	Shelf Size							
		12"	24"	36"	48"	60"	72"	84"	92"
	Shelf	1x	1x	1x	1x	1x	1x	1x	1x
	Cleat	1x	1x	1x	1x	1x	1x	1x	1x
	Alligator® Anchor	2x	3x	4x	5x	6x	7x	8x	9x
	#12x2" Round Head Screw	2x	3x	4x	5x	6x	7x	8x	9x
	Bracket	2x	2x	3x	4x	4x	5x	5x	6x
	#8 x1.1/2" Round head screw	4x	4x	6x	8x	8x	10x	10x	12x
	Cork Leveling Pads	4x	4x	6x	8x	8x	10x	10x	12x

Additional Information



S
D



Alligator[®]
by TOGGLER



All-purpose expandable anchor
Cheville extensible tout usage
Anclaje expansible multi-uso

Strongest anchor in concrete and solid walls
Cheville la plus forte dans le béton et les murs pleins
El anclaje más fuerte en las paredes de concreto y sólidas

F

1a  $\varnothing 1/4"$  $1-3/4"$

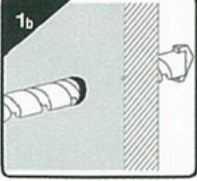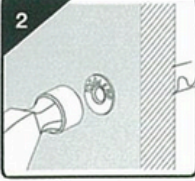1b  2 

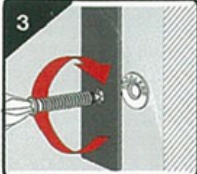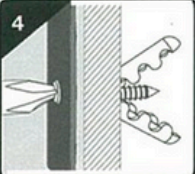3  4 

Loads* / Charge* / Carga*		
Concrete Béton Hormigón		
Safe load Poids sécu Carga seg	155 lbs 70 kg	141 lbs 63 kg
Break poi... Poids de bris Ruptura de peso	620 lbs 281 kg	564 lbs 255 kg

Loads* / Charge* / Carga*		
Drywall		
	60 lbs 27 kg	15 lbs 6 kg
	136 lbs 61 kg	57 lbs 25 kg

Rust-resistant Résistant à la rouille Resistente a la roya			
Hollow Wall Mur Creux Pared Hueca	drywall gypse tablaroca		
	tile céramique cerámica		
	plaster plâtre yeso		
Masonry Maçonnerie Albanileria	concrete béton hormigón		
	block bloc bloque		
	brick brique ladrillo		



SWEDISH DOOR

