





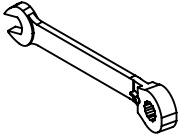

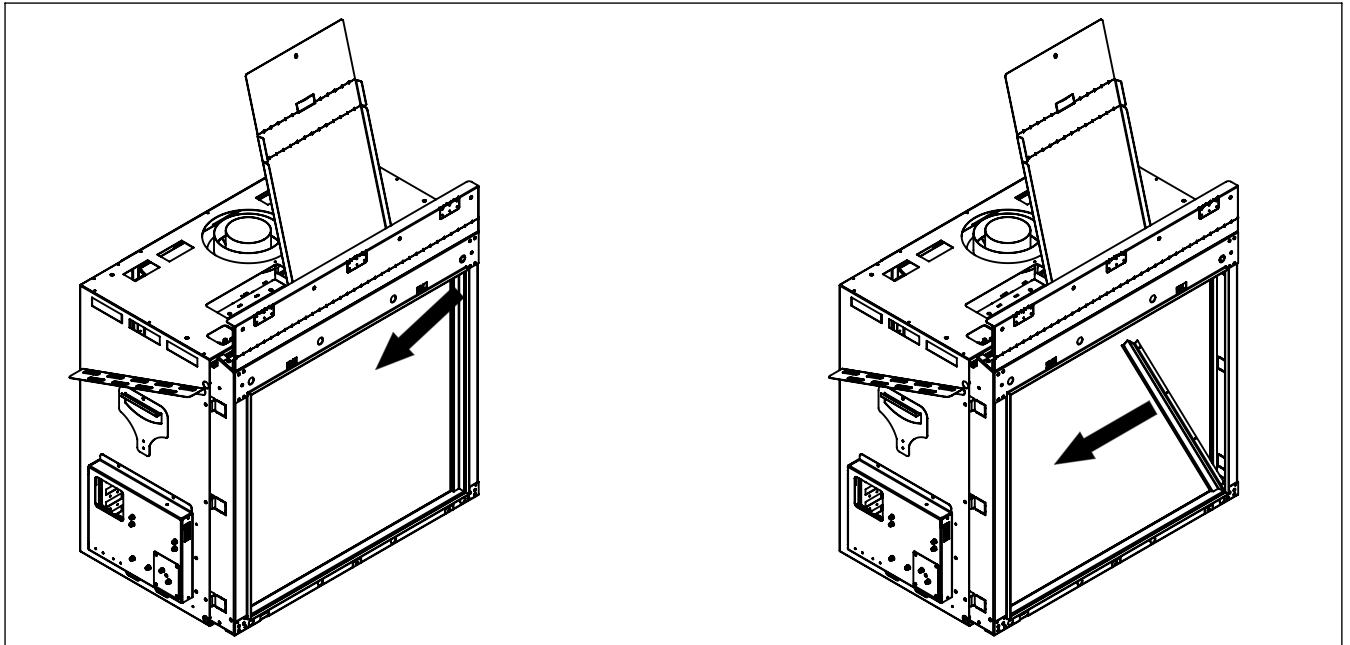


# Wilderness Traditional Reflective Panel Installation Guide

	
Back panel (MMR10090) X1	Side panel (MMR10090S) X2
	
Back lower holder (1009027) X2	Side lower holder (1009017-A) X2
	
Upper long holder (1009017) X4	M6 screw (M361) X16


Supplied	Not Supplied	
		
10mm Wrench	Suction cup	Phillips head screwdriver (PH3)

**1- Pull to release the top of the side trim and take it all the way out , as shown in figure (1),then remove the other side trim the same way.**

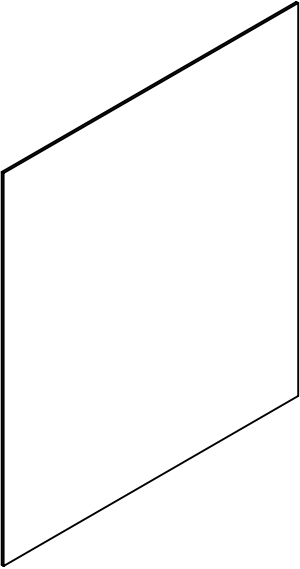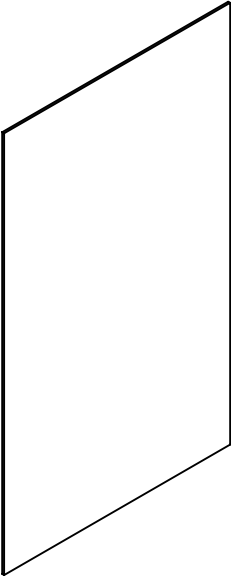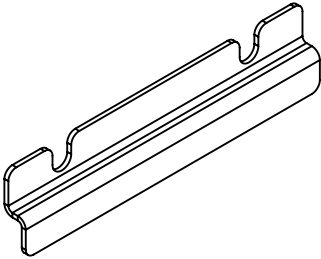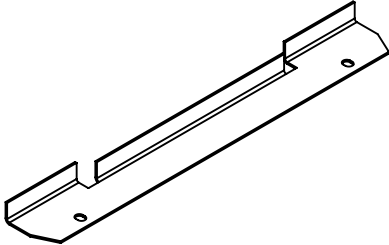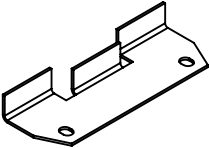


**Figure (1)**

**2- Pull the side of the bottom trim and take it all the way out , as shown in figure (2).**

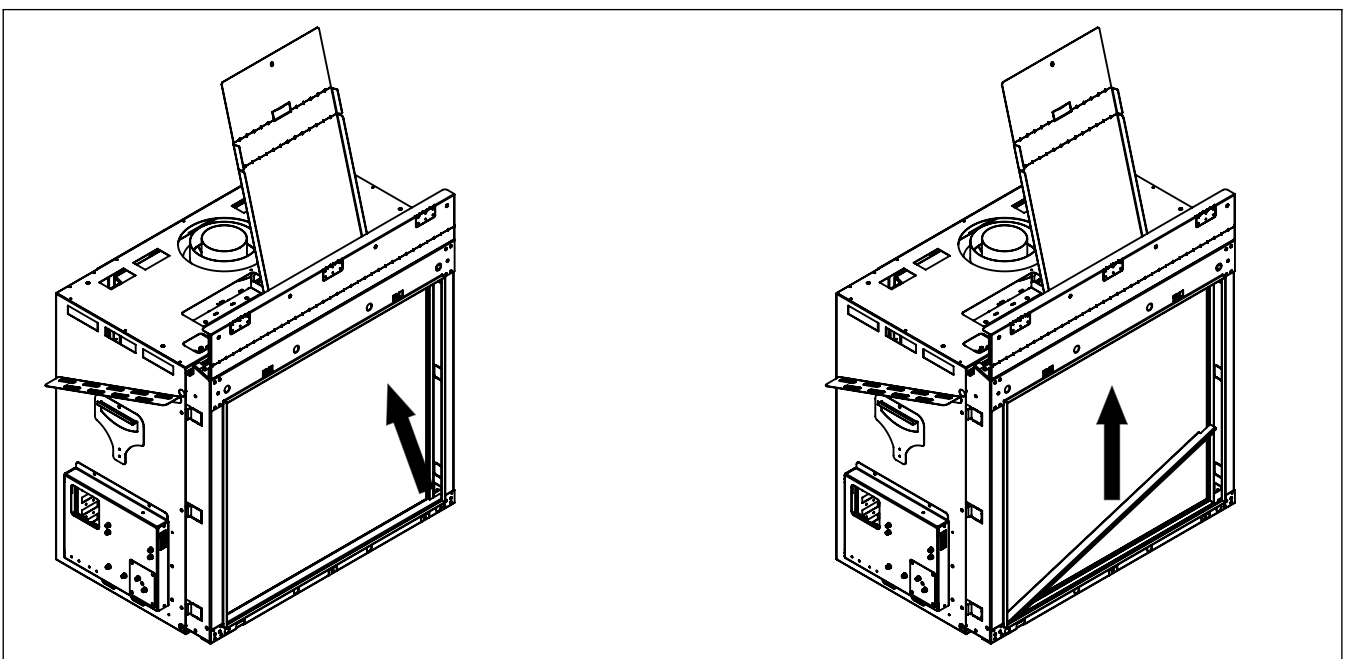

**Figure (2)**

**3- Push the heat barrier holder all the way up , then pull the bottom of the heat barrier and remove as shown in figure (3).**

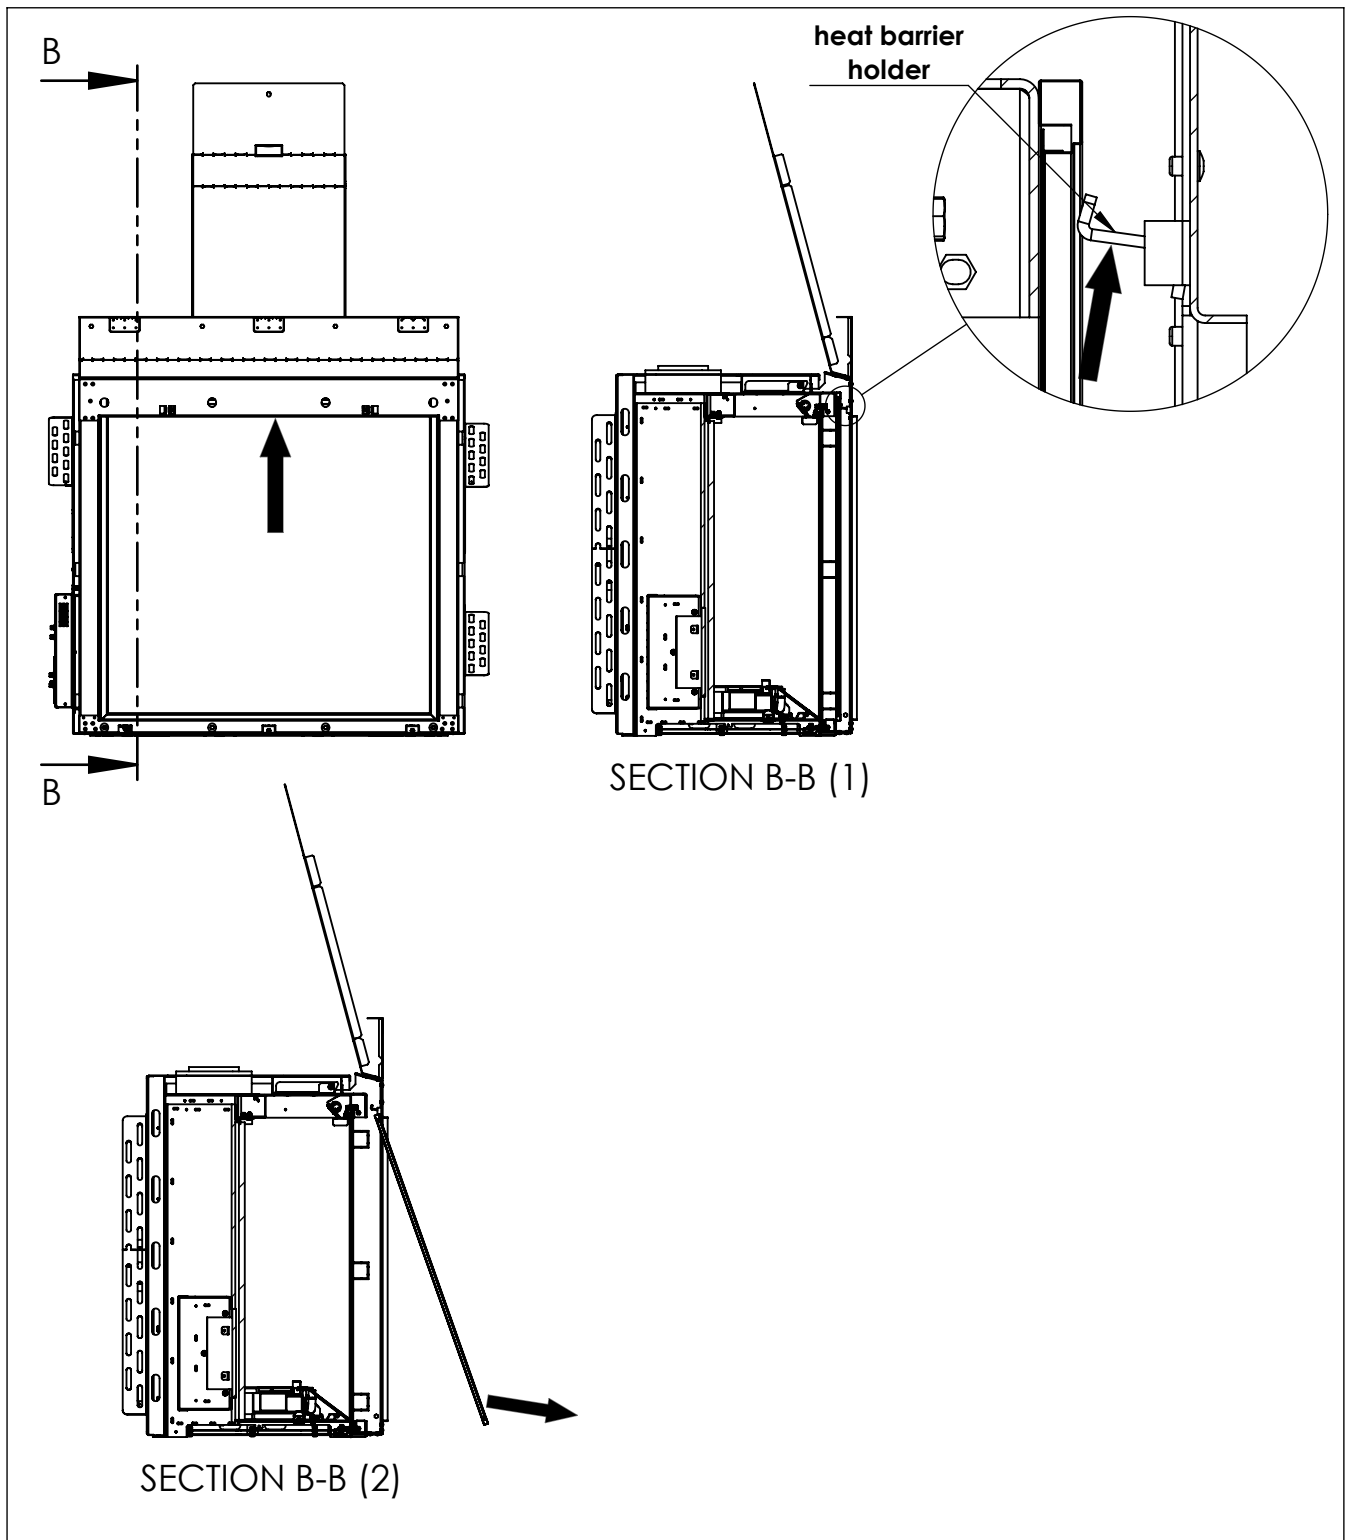

**Figure (3)**

- 4- Attach the suction cup to the center of the glass as shown in figure (4).**

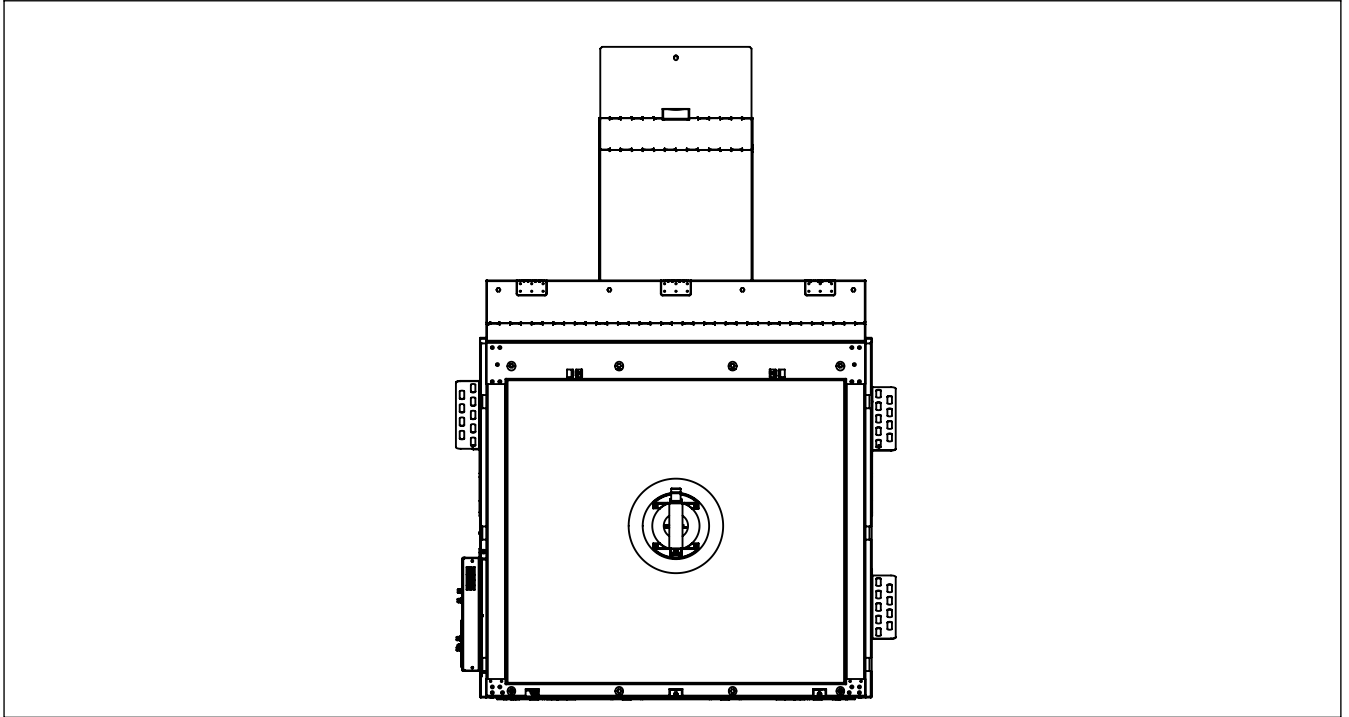


Figure (4)

- 5- While holding the glass, release the glass upper bracket using 10(mm) wrench to take out the screws which are holding it, as shown in figure (5).**


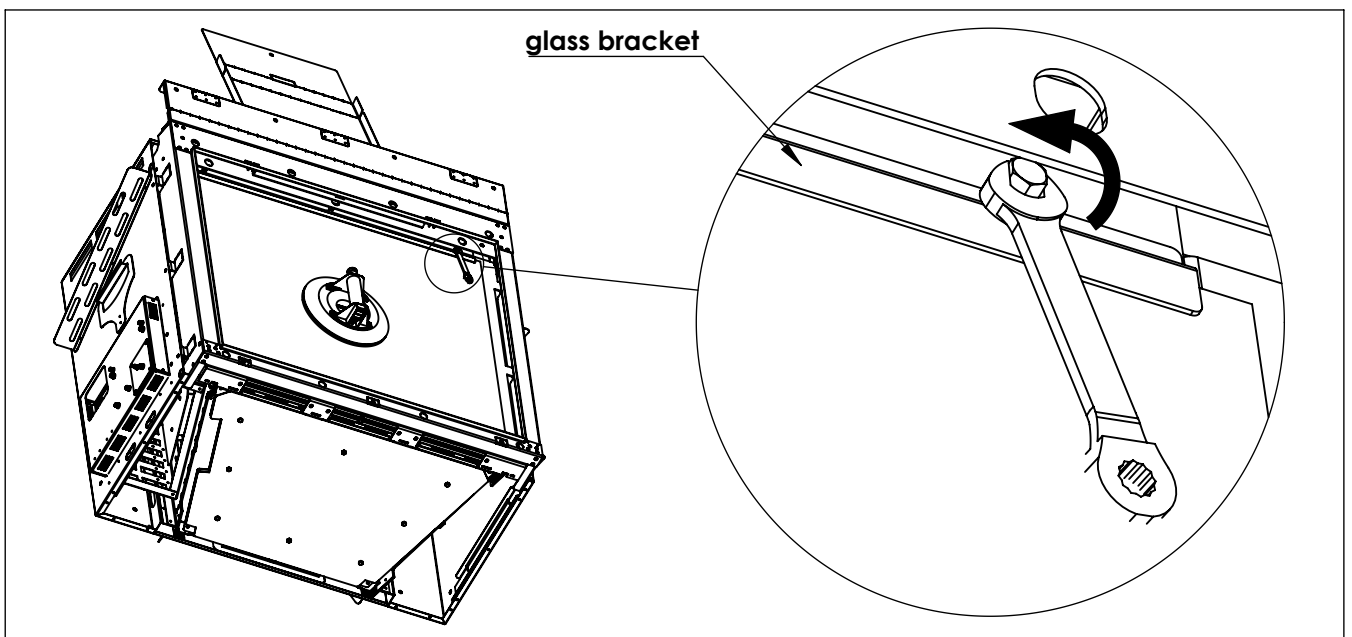



Figure (5)

- 6- Rise the glass up until its released from the bottom , the pull the bottom of the glass out and take it all the way out, as shown in figure (6).**

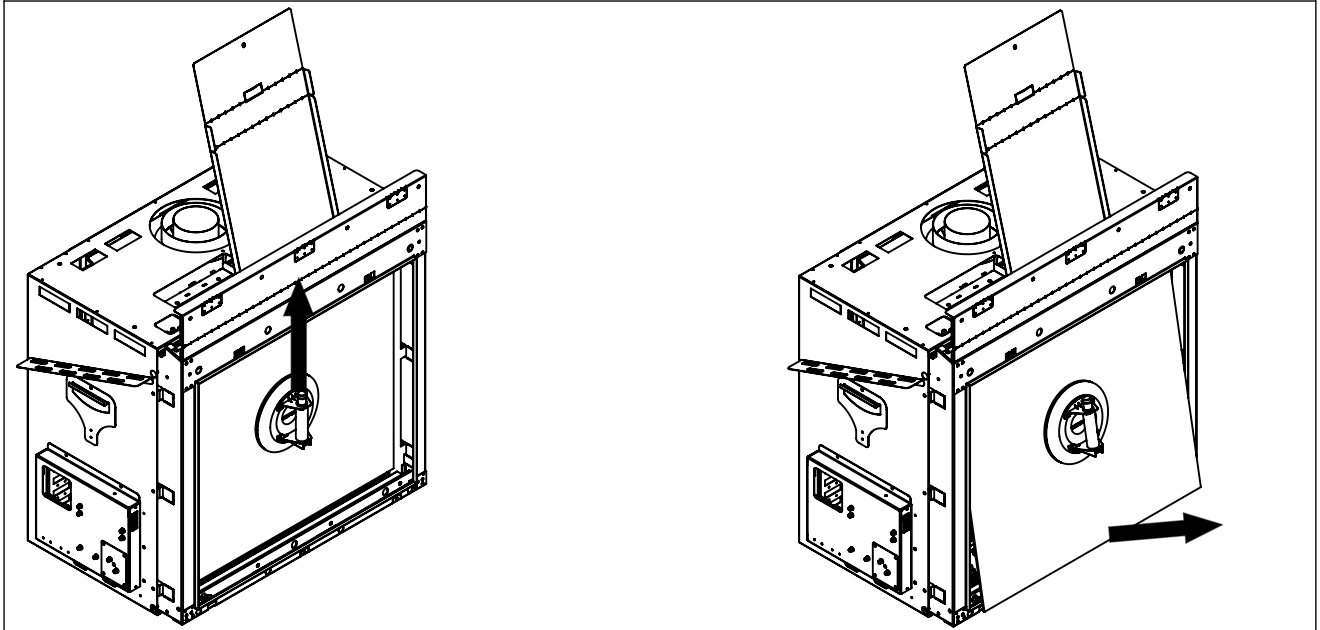

**Figure (6)**

- 7- Remove the grill covers then pull the grill and remove, as shown in figure (7).**

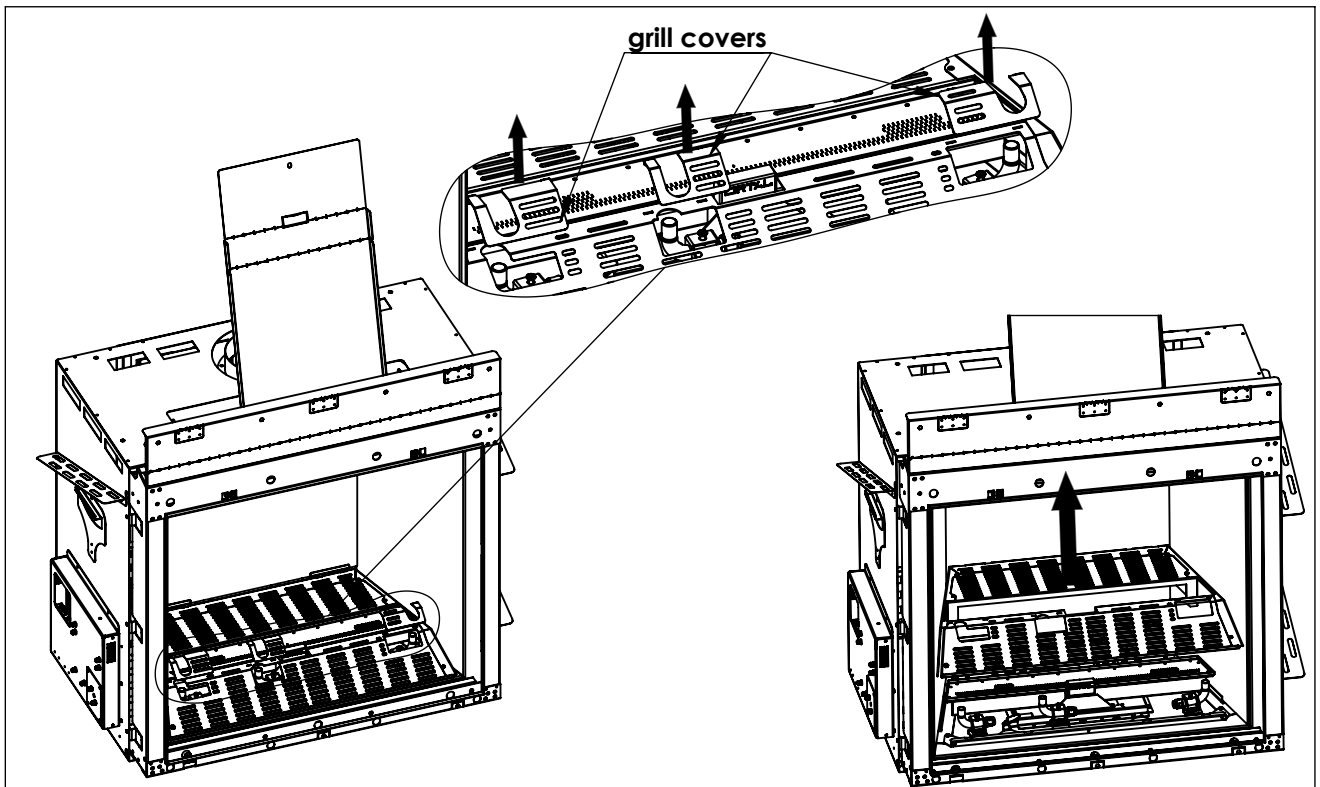

**Figure (7)**

- 8- Attach the back panel lower holders using two screws for each with phillips head screwdriver, and dont tighten the screws to the end, as shown in figure (8).**

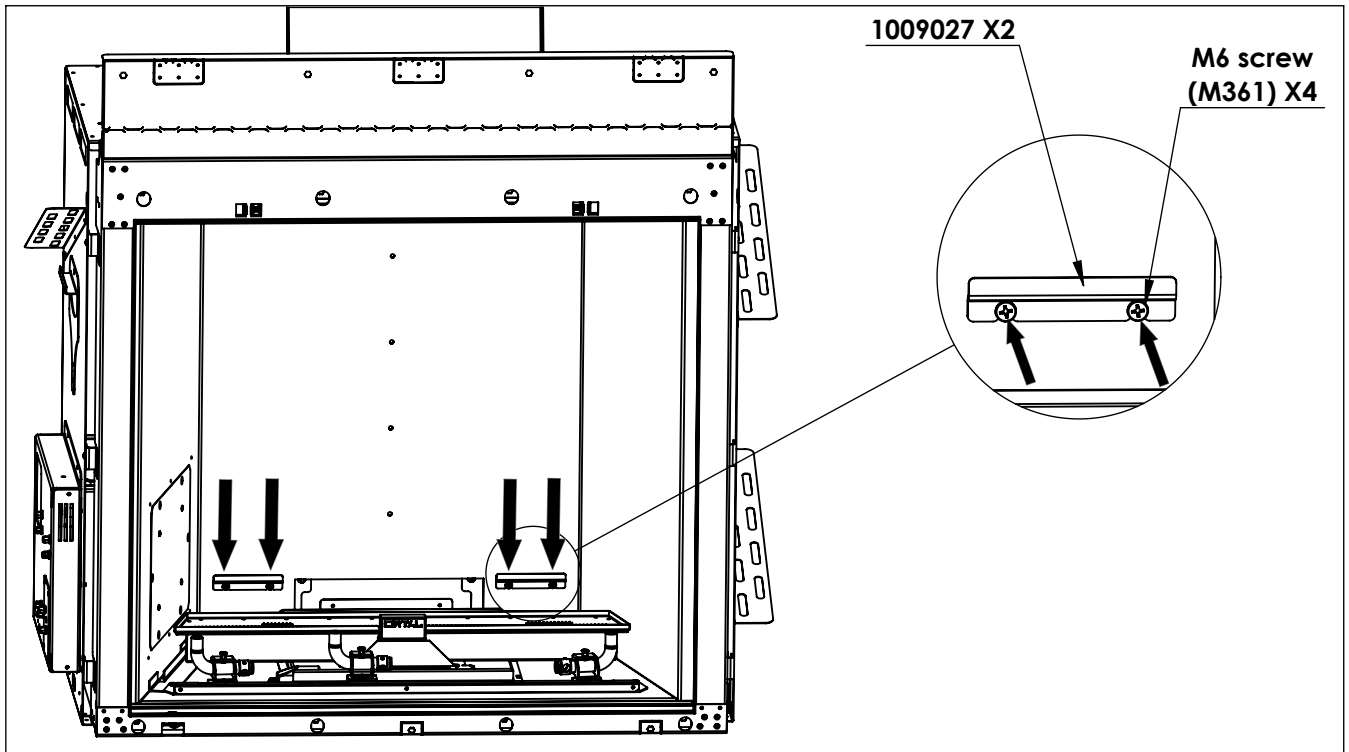


Figure (8)

- 9- Attach the upper holders of the back panel to the top of the panel, and the suction cup to the center of the panel as shown in figure (9).**

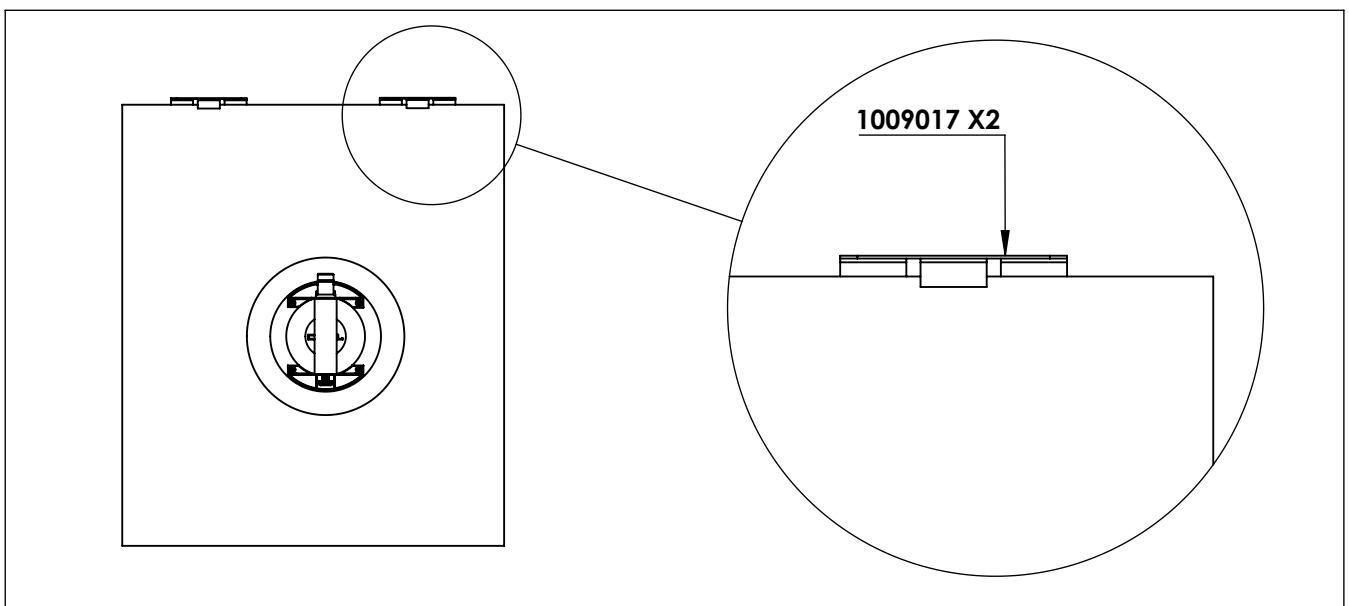


Figure (9)

**10- Attach the back panel to the unit, as shown in figure (10), and make sure to get the panel inside the lower holders.**

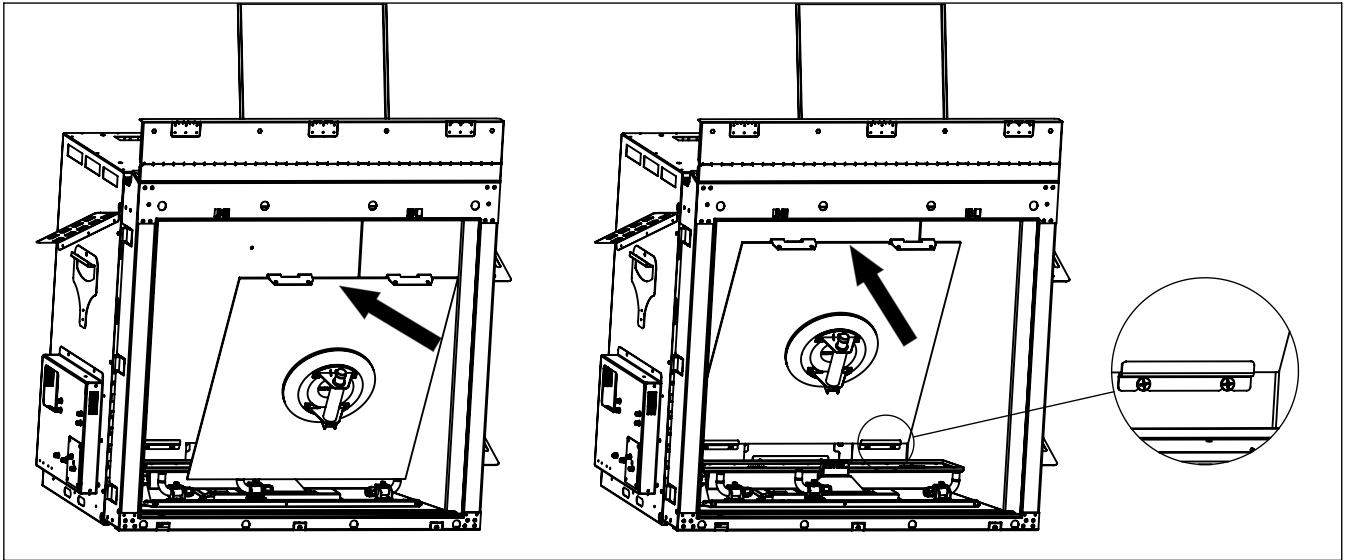


Figure (10)

**11- Fix the upper holders with two screws for each one using Phillips head screw driver, as shown in figure (11), and tighten the screws of the lower holders.**

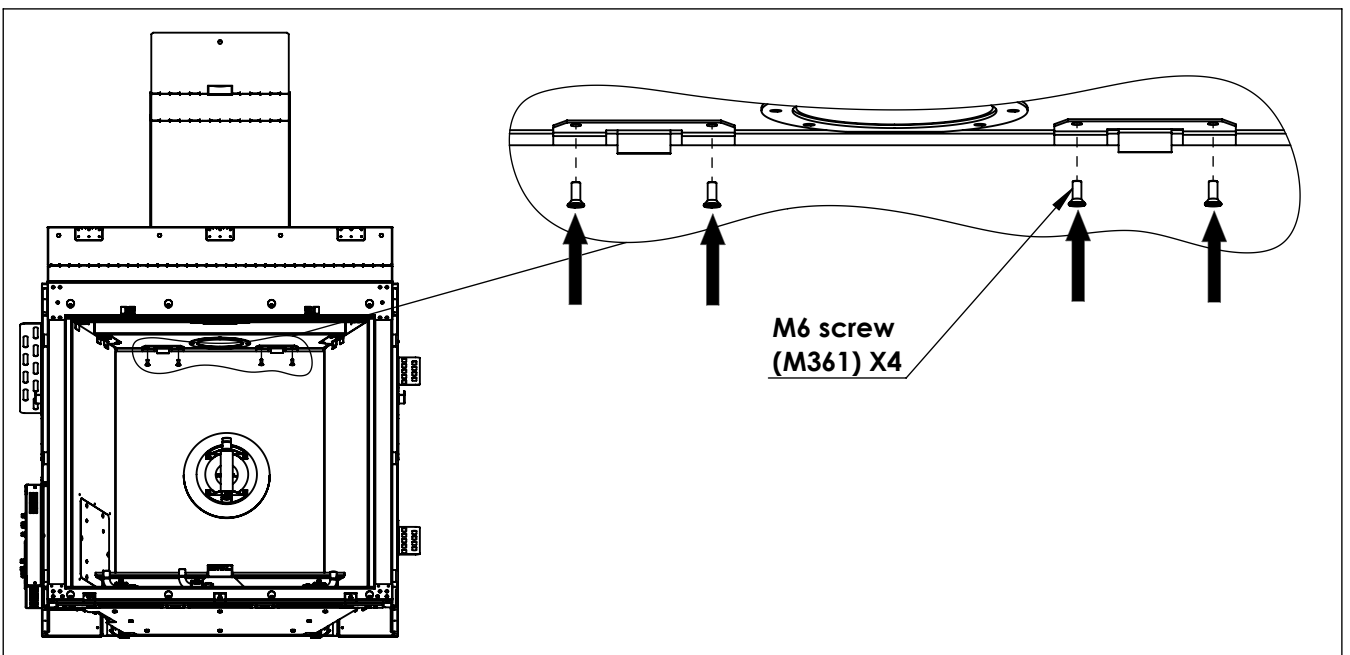


Figure (11)

- 12- Attach the side panel lower holder using two screws with phillips head screwdriver, and dont tighten the screws to the end, as shown in figure (12).**

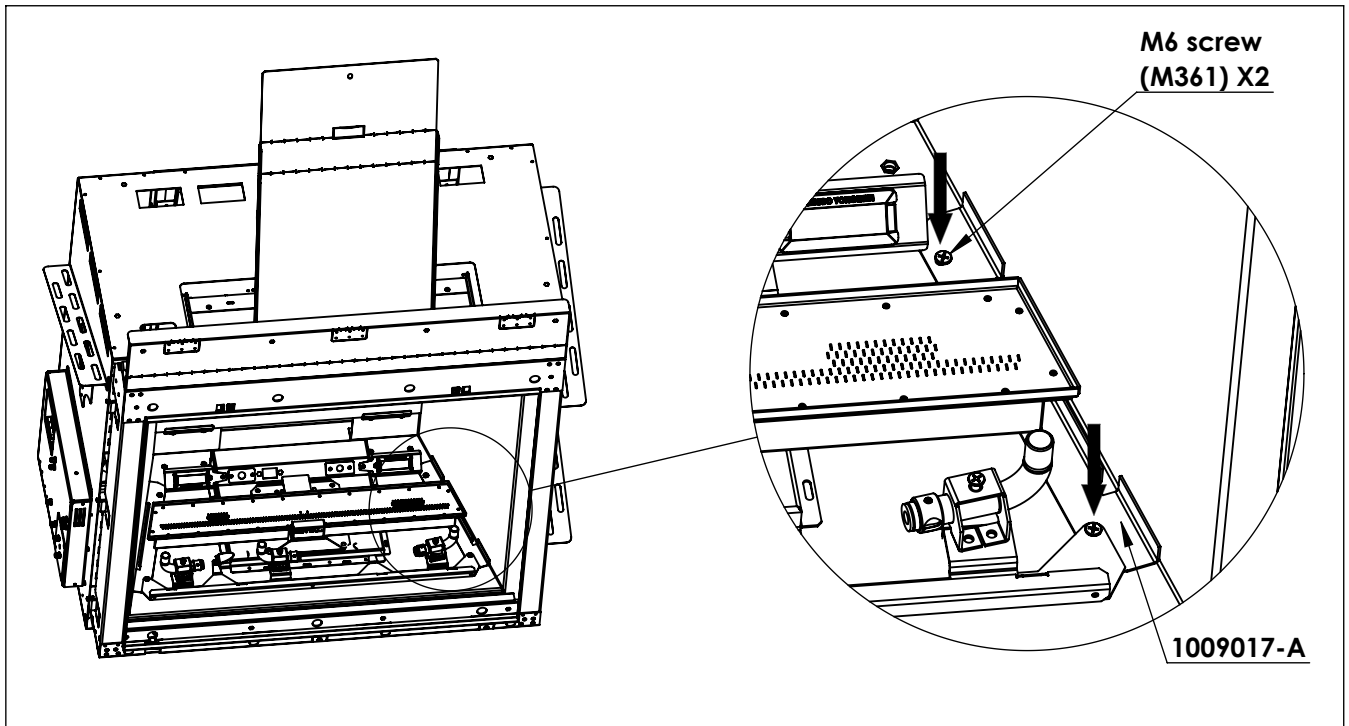


Figure (12)

- 13- Attach the upper holder of the side panel to the top of the panel, and the suction cup to the center of the panel as shown in figure (13).**

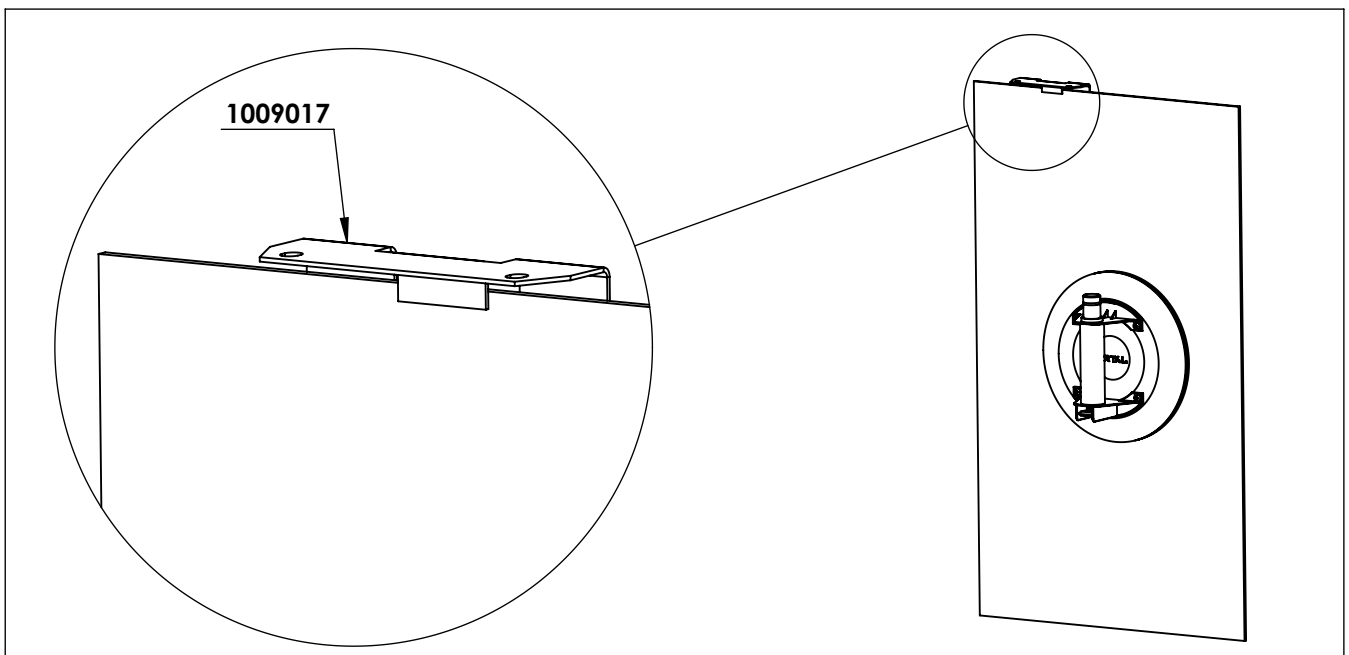


Figure (13)

**14- Insert the side panel to the unit as shown in figure (14), and make sure to get the panel inside the lower holder.**

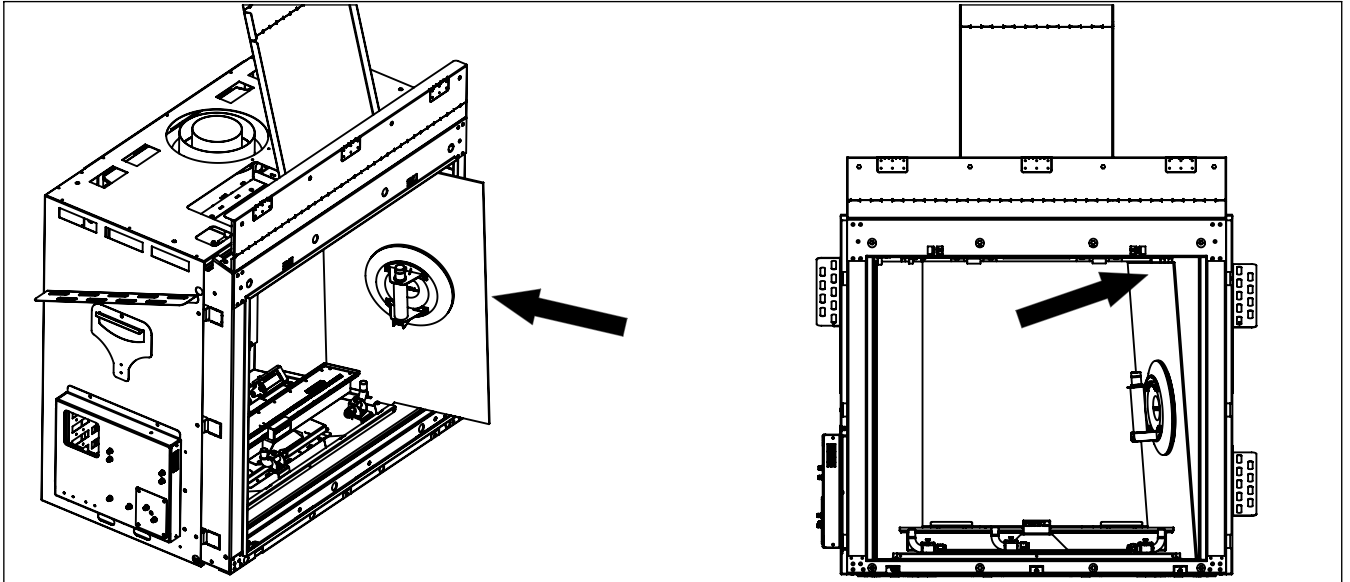


Figure (14)

**15- Fix the upper holder with two screws, and tighten the lower holder screws, using Phillips head screwdriver as shown in figure (15), then install the other side panel at the same manner.**

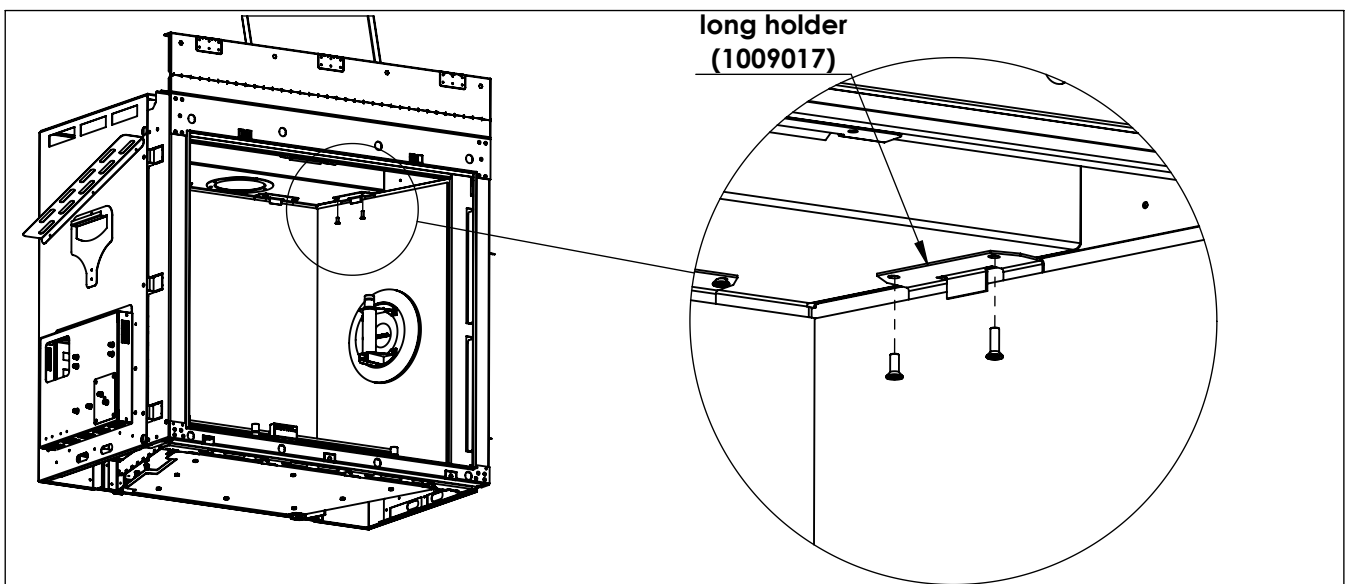


Figure (15)

To remove reverse the above procedure .