

Guide to: Set MI-MX kettle to exhibition mode

Compiled by: Aki Ainetdin

Date: 29.11.2018

This Quick guide contains:


1. How to access components inside the main leg
2. Set the kettle to exhibition mode by short-circuit S8 kettle position switch

Repreparation: Disconnect electrical power from the unit. Remove the back, front and the top cover (see pages 2-4)



Tools and accessories: Normal hand tools and one terminal strip for connection.

Quick guide:


1. Disconnect two wires that is coming from electrical box to S8 kettle position switch terminal.
2. Connect these two wires together with a terminal strip as shown on the image below.
3. After connection is made, re-assembly kettle panels and connect the electrical power to the unit.
4. Now the kettle is set in exhibition mode.
5. For setting kettle back to normal user mode remove terminal strip and connect wires back to S8 terminal.

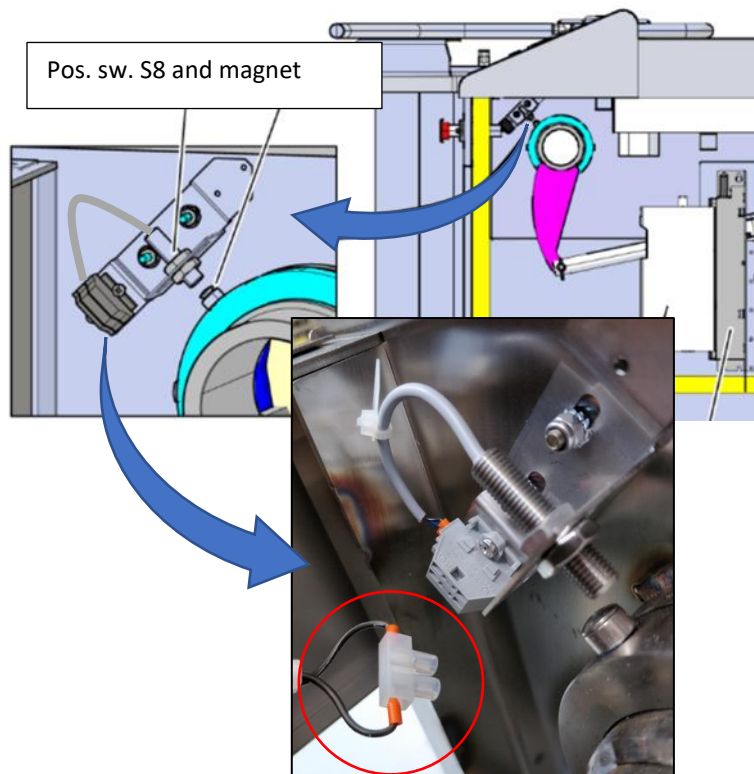


Opening main leg panels for access to electrical components:
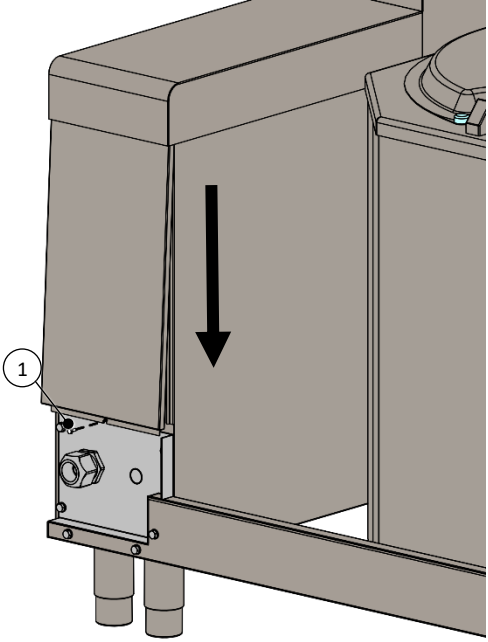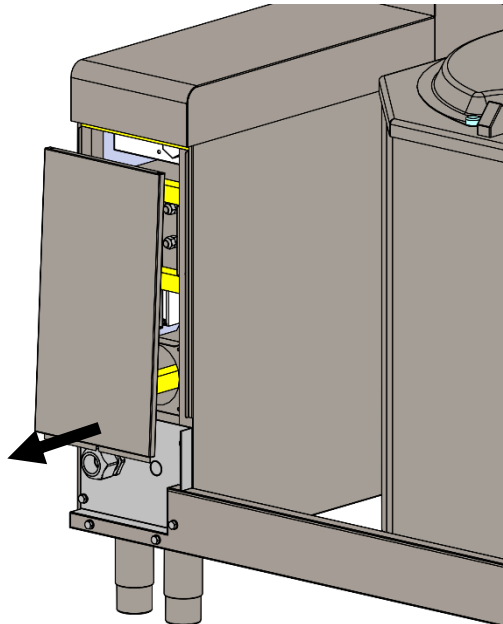
<p>1. Open the bolt (1) at the bottom and slide the panel down.</p>	
<p>2. Remove the panel by pulling panel away from the unit.</p>	


3. Push the leg top cover forward few centimeters until locking slide release cover.

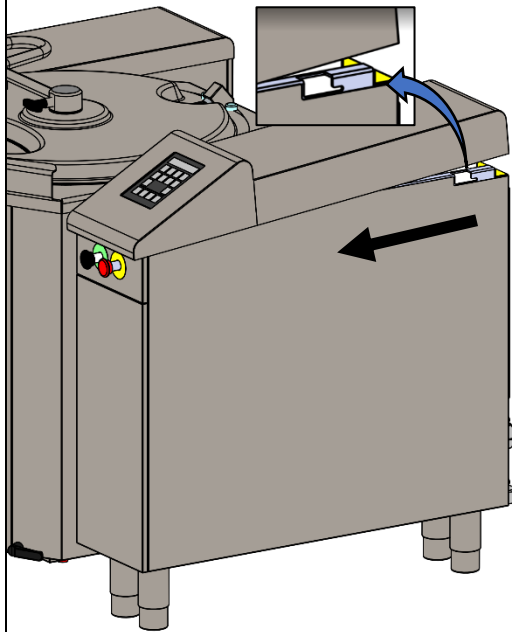

4. Lift the rear of the leg cover up. The right leg has a support (2) to keep the cover opened.

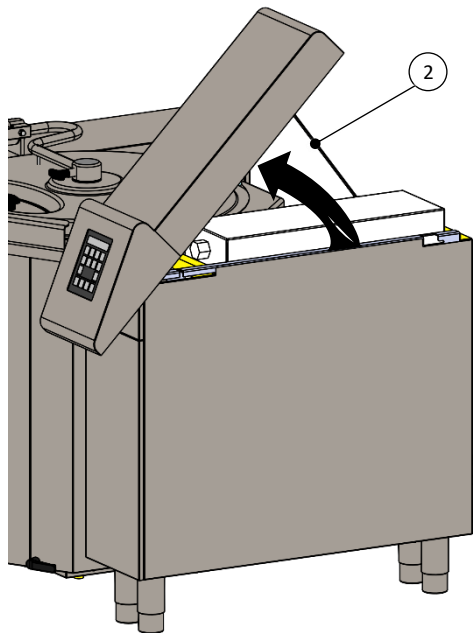

5. Leg front panels are attached with two screws (3) at the bottom of the panel. After removing the screws, first pull down the panel and then remove panel by pulling it away from the unit.

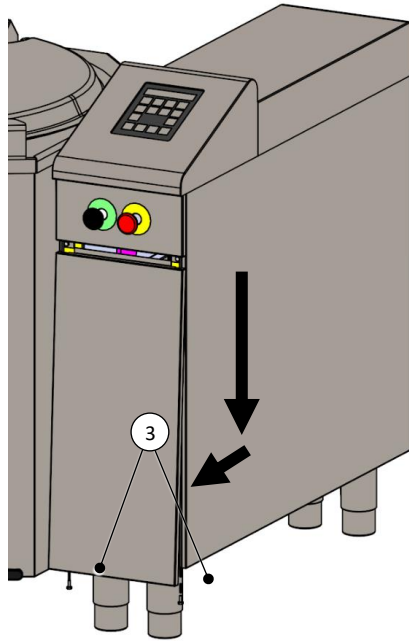

6. The side plates may also be removed for maintenance work: After the top cover is open loosen screw (4) on the button panel and then open 3 screws (5) under the side plate and slides it down.

