

# PVT Next Day Legionella PCR™ Test Instructions

Next Day Legionella PCR™

**IMPORTANT:** Perform and ship this test **ONLY** on Monday, Tuesday, Wednesday, or Thursday

- 1 GATHER MATERIALS**  
One water sample location requires the following items found in the shipping carton:



250 mL Sterile Sample Bottle with Location ID Label



Security Seal



Shipping Label  
(Fedex Priority Overnight)

In addition to the supplied items (above) you will need:


- Packing Tape     Gloves  
 Safety Glasses  
(Recommended)

- 2 AFFIX LOCATION ID LABEL**  
Affix completed location ID label horizontally to water sample bottle.

- 3 COLLECT WATER SAMPLE**  
**IMPORTANT:** *Gloves are required and safety glasses are recommended to be worn.*  
Fill water sample bottle to neck of bottle with water from source to be tested. Close bottle tightly and briefly shake (5-10 sec.) to dissolve Sodium Thiosulfate Neutralizing Powder.

- 4 APPLY SECURITY SEAL**  
Apply security seal to water sample bottle over side of cap to side of container exactly as shown. Make sure security seal does not cover location ID label.

- 5 REPACK and SHIP on **SAME DAY****  
For assurance of safety in shipping, repack water sample bottle upright (lid up) in shipping carton as shown in the photo. Close and seal lid with tape. Apply Priority Overnight shipping label.

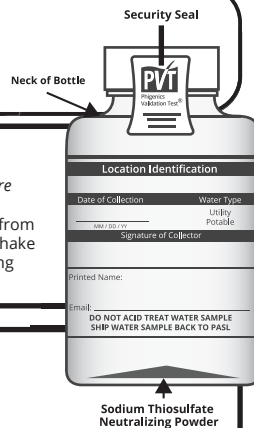

250 mL Water Sample Bottles

# PVT Standard ISO Test Instructions

ISO Spread Plate Method 11731 for *Legionella*

**IMPORTANT:** Perform and ship this test **ONLY** on Monday, Tuesday, Wednesday, or Thursday

## 1 GATHER MATERIALS

One water sample location requires the following items found in the shipping carton:



250 mL Sterile Sample Bottle with Location ID Label



Security Seal



Shipping Label  
(Fedex Priority Overnight)

In addition to the supplied items (above) you will need:

- Packing Tape     Gloves  
 Safety Glasses  
(Recommended)

## 2 AFFIX LOCATION ID LABEL

Affix completed location ID label horizontally to 250 mL sample bottle.

## 3 COLLECT WATER SAMPLE

**IMPORTANT:** *Gloves are required and safety glasses are recommended to be worn.*


Fill 250 mL sterile sample bottle to neck of bottle with water from source to be tested. Close bottle tightly and briefly shake (5-10 sec.) to dissolve Sodium Thiosulfate Neutralizing Powder.

## 4 APPLY SECURITY SEAL

Apply security seal to 250 mL sample bottle over side of cap to side of container exactly as shown. Make sure security seal does not cover location ID label.

## 5 REPACK and SHIP on **SAME DAY**

For assurance of safety in shipping, repack water sample bottle upright (lid up) in shipping carton as shown in the photo. Close and seal lid with tape. Apply Priority Overnight shipping label.

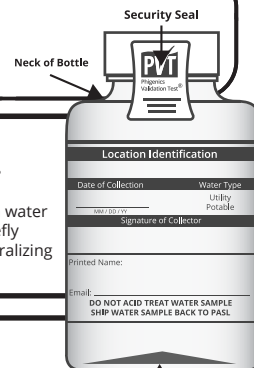

Neck of Bottle

Security Seal



Location Identification

Date of Collection    Water Type  
Utility    Potable

Signature of Collector

Printed Name:

Email: DO NOT ACID TREAT WATER SAMPLE SHIP WATER SAMPLE BACK TO PAST

Sodium Thiosulfate Neutralizing Powder



250 mL Water Sample Bottles