
FTR FORTI-LOCK FLEECE PATTERN


Step 1.
Cut, Fold & Apply finger flashings at column flange for both sides


A - 8" Min. B - 2" Min. C - 8" Min.

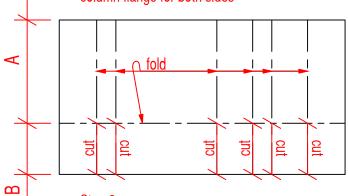


A


Step 2. Cut, Fold & Apply finger flashings at column web for both sides

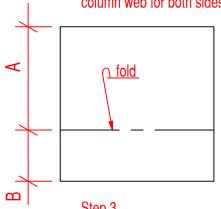


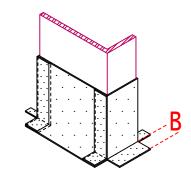

Step 3.
Cut & Apply target patch over finger flashings with 2" overlap

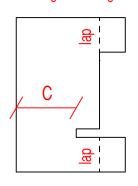

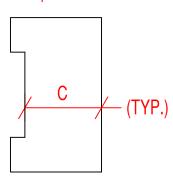

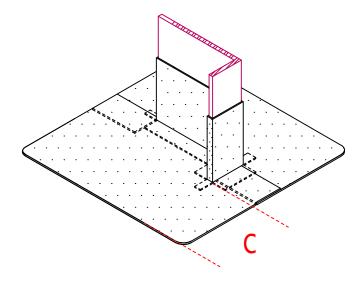

Round all Corners



GENERAL REFERENCE:
FORTI-LOCK
APPLICATION GUIDLINES

APPLICABLE SYSTEMS:
PRE APPROVED ONLY

LIQUID APPLIED FTR FORTI-LOCK™ PMMA ANGLE SUPPORT

REVISES DETAIL ISSUE DATE DRAWING NUMBER
ALL PREVIOUS 09-17-20 FTR-FL5